

INJECTION VALVE

Data
Sheet

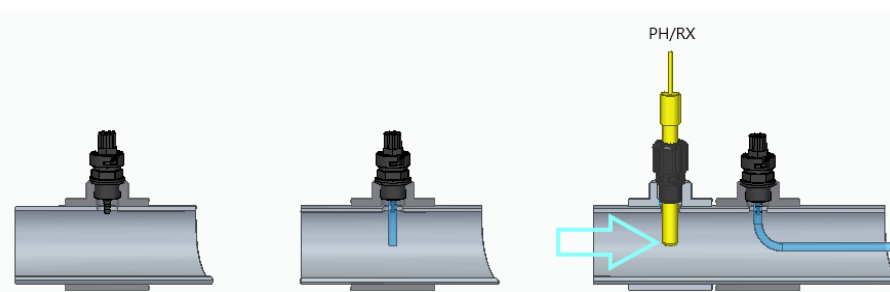
DESCRIPTION

THE INJECTION VALVE IS AN ESSENTIAL ACCESSORY TO BE MOUNTED AT THE END OF THE DELIVERY PIPE OF THE METERING PUMP TO FIX THE INJECTION IN A CERTAIN POINT OF THE PIPE AND AVOID BACKFLOW.

THE NON-RETURN VALVE GENERATES A DEFINED BACK PRESSURE WHICH AVOIDS BACKFLOW AND EMPTYING OF THE DELIVERY PIPE, THUS ALLOWING FOR MORE EFFECTIVE DOSING.



DESCRIPTION		
	Standard	On demand
Body material	PP	-----
Non-return Valve	Lip valve made in Viton®	Lip valve made in Dutral
Flat gasket	Not included	Included
In Connection	Ring nut for hose 4x6 mm	
Out Connection	Rubber holder for hose 4x6 mm	
Piping Connection	1/2"	

EXAMPLES OF INSTALLATION	TECH DRAWING
 <p>FIGURE 1</p> <p>FIGURE 2</p> <p>FIGURE 3</p>	